

Installation Instructions

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS.

IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

(Failure to follow the warnings and instructions on this sheet could result in fire, injury, failure of product, and/or voiding of warranty.)

1. Do not touch while lamp is on. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch hot lens, body, or cap.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from your skin may damage lamp.
6. Do not operate with damaged or missing parts.
7. Do not disassemble beyond cap removal to facilitate lamp and/or accessory installation or replacement.
8. Remove any debris accumulated in the cap periodically.
9. Do not install within 10 feet of a pool, spa, or fountain.
10. Have installed in accordance with all applicable installation codes and standards by a person familiar with the construction, operation, and hazards involved.
11. Consult a qualified electrician to ensure correct branch circuit conductor.
12. Use only cable rated for low voltage. Cable buried more than 6" must be suitable for direct burial. Direct burial cable may be ordered from Vision3 Lighting.
13. Do not pull or hang from fixture! Damage or injury may occur

Installation:

Notes:

- This fixture should not be mounted in such a way that it is buried or in direct contact with the ground or soil.
- This fixture requires a remote transformer or mount option with integral transformer.
- LED & COB models should only be powered and controlled by compatible transformers and control systems. Contact Vision3 Lighting for approved transformer / controls list. Using non-approved transformers / controls could cause the LED to not operate properly or fail.
- (For Integral LED option only) Integral LED options come with a High/Low switch. See 'LED Switching' instructions on next page. Switch will be set to 'High' setting at the factory, unless otherwise specified when ordered.
- (For Retrofit LED option only) Use only Vision3 approved Retrofit MR16 LED options and supplied Heatsink Mount, otherwise LED may overheat and fail.
- (For Amber LED option only) Amber retrofit LED option must follow LED manufacture and wildlife certification program installation & configuration requirements.
- (For COB LED w/ Driver option only) COB LED w/ Driver system design should allow an additional 2W per fixture (6W for LE2-0400 & 10W for LE2-0700 or LE2-1000), to reduce system stress during start up.
- LED ratings subject to change without notice. See website or contact V3 for most current info.

Caution! Fixture will be hot if lamp is on. Remove power and allow fixture to cool before performing any adjustments or maintenance.

1. Unpack the DL3 MR16 Ring Mount from its shipping container and inspect.
2. Hang the DL3 in the desired location by attaching the Mount Ring to a cable, chain or hook (not supplied) capable of holding the weight of the fixture.
Note: Do not hang the fixture from its wire leads. Do not mount the fixture in a location where it is touching, or may touch due to wind, a flammable surface. This fixture should not be mounted in such a way that it is buried or in direct contact with the ground or soil.
3. Connect the DL3 Fixture Leads to the power supply wires using the appropriate connectors (not supplied), per applicable codes. Water can flow thru the strands of the Fixture Leads, so for any outdoor or wet location applications, all wire connections must be water tight to prevent moisture from wicking in to fixture. **Note:** Be sure that the power being supplied matches the rating on the DL3 Label. See notes below for more information about required power.
 - a. Halogen/Retrofit MR16 LED/Integral LED Module/Amber LED/COB LED w/ Driver: white fixture leads connect to transformer's secondary/output wiring.
4. Install lamp and accessories, as described below, if not already installed.

Cap Removal / Installation:

Cap Removal:

1. Remove power from fixture and let cool before touching. **Caution! Fixture may still be hot!**
2. Holding the Body, fully un-thread the Cap from the Body.
3. Inspect O-ring for damage. Replace if necessary.

Cap Installation:

1. Inspect the cap and body threads. They should be free from dirt and fully coated with anti-seize to prevent seizing of cap.
2. Holding the Body, fully thread the Cap onto the Body. Be careful to not cross thread. If O-ring is excessively dry, use a small amount of Krytox lubricant.

Accessory Maintenance:

1. Remove Cap as explained in Cap Removal process.
2. Remove Accessory Clip from Cap.
3. Carefully remove Accessories from Cap, if any.
4. Inspect Cap, Accessories, and Clip for damage. Replace if necessary.
5. Clean Cap and Accessories with a clean, damp cotton cloth.
6. Carefully install new Accessories into Cap.
7. Compress Clip and push into Cap until it holds Accessories tightly in Cap.
8. Install Cap as explained in Cap Installation process.


MR16 Halogen Lamp & Amber LED Maintenance (for certain models):

1. Remove Cap as explained in Cap Removal process.
2. Pull lamp straight out. **Caution! Lamp may still be hot! Be sure lamp has cooled before touching.**
3. Inspect socket for any damage.
4. Clean inside of fixture and Cap with a clean dry cloth.
5. Push new lamp straight in, being careful to align pins. **Note:** Replacement lamp must not exceed ratings on Label.
6. Install Cap as explained in Cap Installation process.

Integral LED Module Maintenance (for certain models):

Integral LED Module Replacement:

1. Remove Cap as explained in Cap Removal process.
2. Loosen and remove the LED Module Screws.

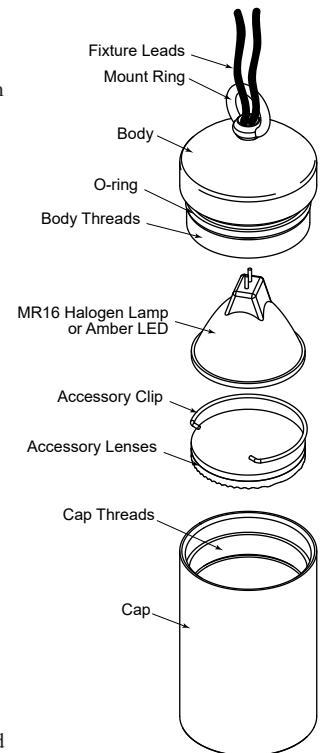

Installation Instructions


INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS.

IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

(Failure to follow the warnings and instructions on this sheet could result in fire, injury, failure of product, and/or voiding of warranty.)

- Pull LED straight out. Do not twist or the pins will break off in the socket. **Caution! LED may still be hot! Be sure LED has cooled before touching.**


- Clean the grease off of the Heatsink top surface using a rag dipped in alcohol.
- Inspect the socket for any damage.
- If the replacement LED Module does not come with a thermal transfer pad on the base, apply a thin layer of thermal grease (not supplied) to the surface of the Heatsink that will contact the bottom of the LED Module.

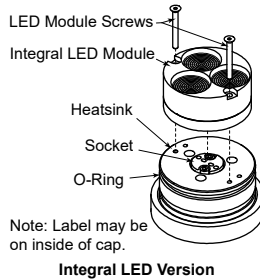

- Align the pins on the LED Module with the socket and push straight in. Do not twist or push in at an angle or the pins may be damaged.
- Install and tighten the LED Module Screws. **Caution!** Over tightening of screws could crack the LED Module case.
- Install Cap as explained in Cap Installation process.


Integral LED Output Switching:

- Remove Cap as explained in Cap Removal process.
- Inspect for damage. Replace any damaged parts, if necessary.
- Clean inside of fixture and Cap with a clean, damp cotton cloth.
- Find LED High/Low Switch on side of Integral LED Module.
- Using a pin, small nail, etc, flip the switch in the desired direction. See the LED Module Switch sketch for which direction corresponds to which setting.
- Install Cap as explained in Cap Installation process.

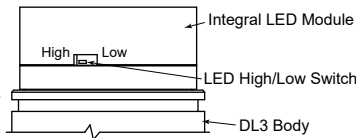

Retrofit MR16 LED Maintenance (for certain models):

- Remove Cap as explained in Cap Removal process.
- Pull lamp straight out. **Caution! Lamp may still be hot! Be sure lamp has cooled before touching.**
- Inspect socket for any damage.
- Clean inside of fixture and Cap with a clean dry cloth.
- Push new lamp straight in, being careful to align pins. Make sure Retrofit MR16 Lamp fully contacts Heatsink Mount, otherwise lamp may overheat and fail prematurely. **Note:** Replacement lamp must not exceed ratings on Label. Only use Vision3 approved Retrofit MR16 Lamp and supplied Heatsink Mount, otherwise LED may overheat and fail.
- Install Cap as explained in Cap Installation process.

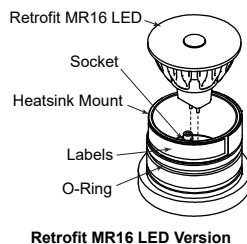

- Thoroughly clean the COB Mount with a lint free towel. Note: Make sure the old Thermal Pad and any residue are removed from the COB Mount.

- Place the new COB up against the Holder clip in the same orientation as the removed COB. Ensure that the polarity marks on the Holder match the polarity marks on the COB. Slowly press on the opposite side of COB to compress the Holder clip until the COB drops into the recess. Note: Only touch the edges of the COB as oils and dirt from your skin can damage the diodes.


- Remove clear plastic film from supplied Thermal Pad, and, using light pressure, apply to back of the new COB chip. Make sure pad is square and fully covers the back of the COB. Remove secondary clear plastic film from the exposed side of the Thermal Pad.

- Place the Holder and Reflector Adapter on the COB Mount in the same orientation as it was removed.

- Install and tighten the two Holder Screws. Do not overtighten.

- Insert Reflector and twist clockwise to lock.

- Install Cap as explained in Cap Installation process.

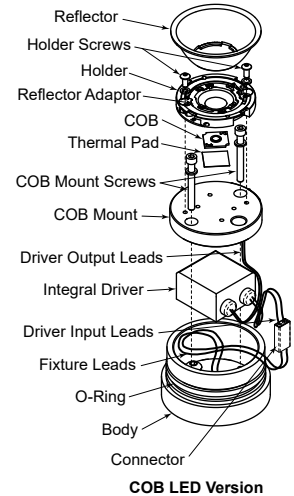

Changing COB LED Integral Driver:

- Remove Cap as explained in Cap Removal process.
- Twist Reflector counter-clockwise to unlock and remove.
- Lightly pull and twist Driver Output Leads (red & blue) until they are removed from the Holder. Note lead position.
- Loosen and remove the two Holder Screws, the Reflector Adapter, and the Holder. Note: Twist Holder to facilitate COB removal.
- Loosen and remove the two COB Mount Screws.
- Note the orientation of the COB Mount. Remove the COB Mount from the body.
- Note positioning and routing of Integral Driver wires. Remove Integral Driver from body.
- Lightly pull and twist Driver Input Leads (black) to remove from Connector.
- Install new Integral Driver by inserting input leads (black) into Connector. Route Integral Driver leads similarly as the removed Integral Driver.
- Seat the Integral Driver in the Body.
- Route the Driver Output Leads (red & blue) through the COB Mount and then place the COB Mount onto the Body in the same orientation as it was removed.
- Install and tighten the two COB Mount Screws. **Caution! Do not pinch leads!**
- Place the Holder with COB and Reflector Adapter on the COB Mount in the same orientation as it was removed. Note: If COB chip needs to be replaced also, do that now, as explained above.
- Install and evenly tighten the two Holder Screws. Do not overtighten.
- Install Driver Output Leads into the Holder (red to '+' & blue to '-'). Excess wire can be pushed into COB Mount.
- Insert Reflector and twist clockwise to lock.
- Install Cap as explained in Cap Installation process.

COB LED & Driver Maintenance (for certain models):

Changing Optics:

- Remove Cap as explained in Cap Removal process.
- Twist Reflector counter-clockwise to unlock and remove.
- Insert new Reflector and twist clockwise to lock.
- Install Cap as explained in Cap Installation process.

Changing COB Chip:

- Remove Cap as explained in Cap Removal process.
- Twist Reflector counter-clockwise to unlock and remove.
- Loosen and remove the two Holder Screws, the Reflector Adapter, and the Holder. Note: Twist Holder to facilitate COB removal.
- Note the orientation of the COB. Compress the Holder clip and carefully remove the COB chip.